Installation instruction

1000

600

250

(mm)

Minimum 300x300x150mm
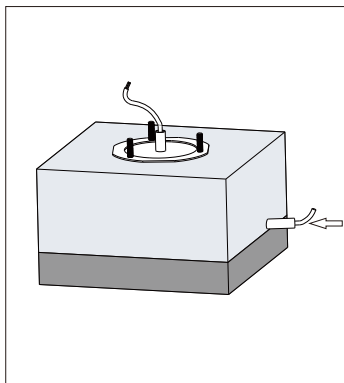
1. Dig a hole with minimum size 300x300x150mm

The radar sensing direction

30°±8°

2. Put the L-type bracket into the hole
   (Pay attention to the radar sensing direction)
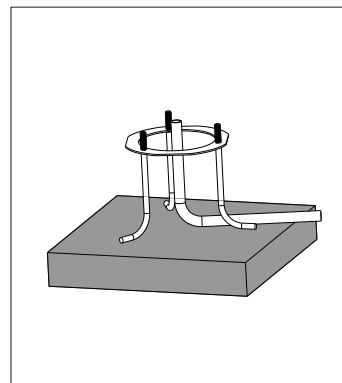
3. Install the conduit tube

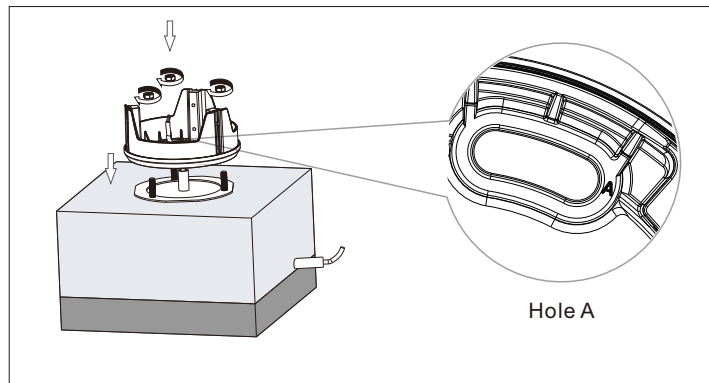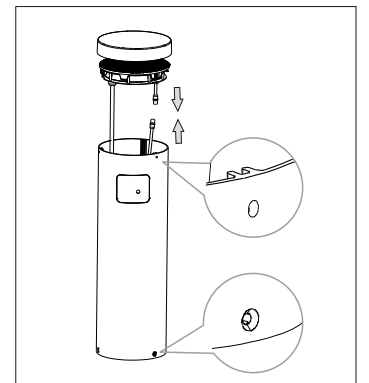Foundation concrete block.
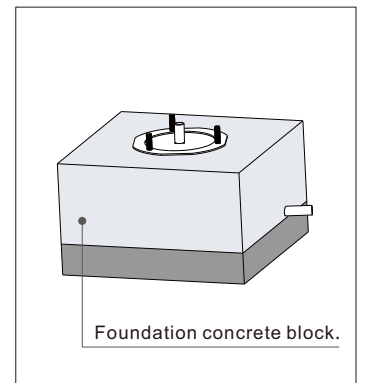
4. Make sure the bracket plate is flat
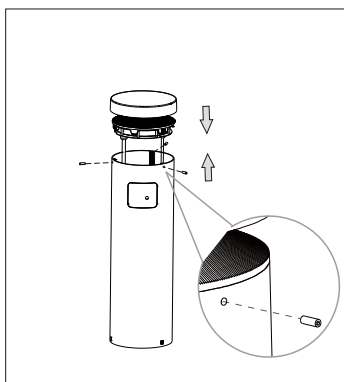   with ground .
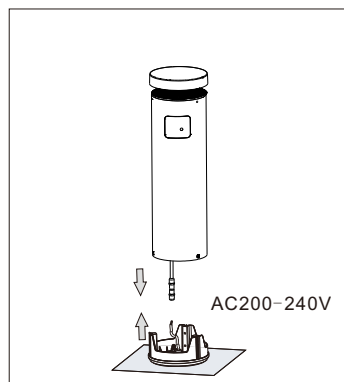
5. Put the wire through conduit tube
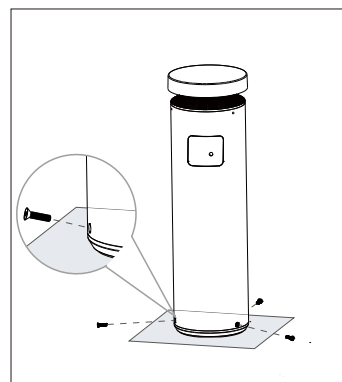
Hole A

6. Fix the mounting plate to the L-type bracket

7. Connect the wires

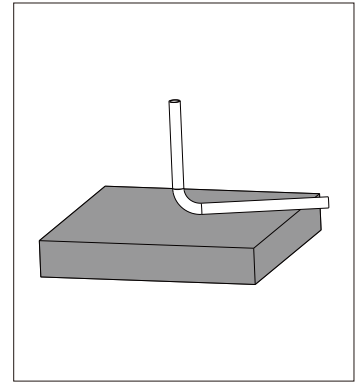8. Fix the bollard head and bollard tube

AC200~240V
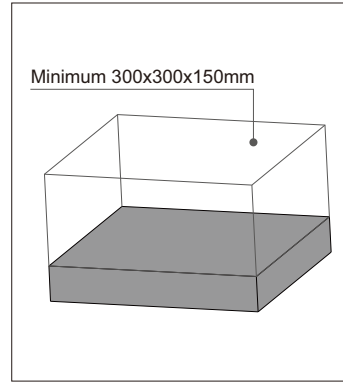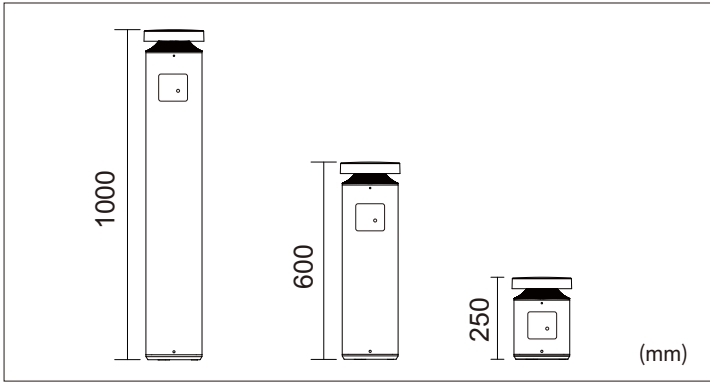
9. Connect the bollard wire to the
   electricity cable

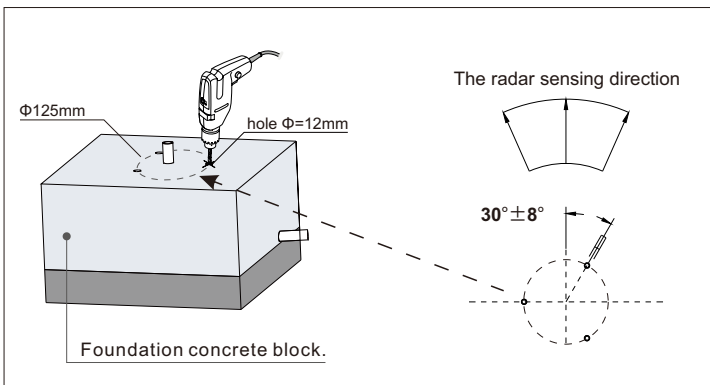10. Fix the bollard tube onto the
    mounting base, Pay attention to the
    radar sensing direction.

Installation instruction

1000

600

250

(mm)

Minimum 300x300x150mm

1. Dig a hole with minimum size 300x300x150mm

---

2. Put the conduit tube

Φ125mm

hole Φ=12mm

The radar sensing direction

30°±8°

Foundation concrete block.
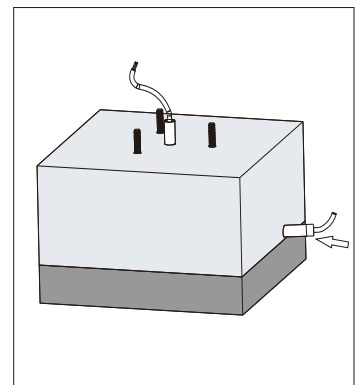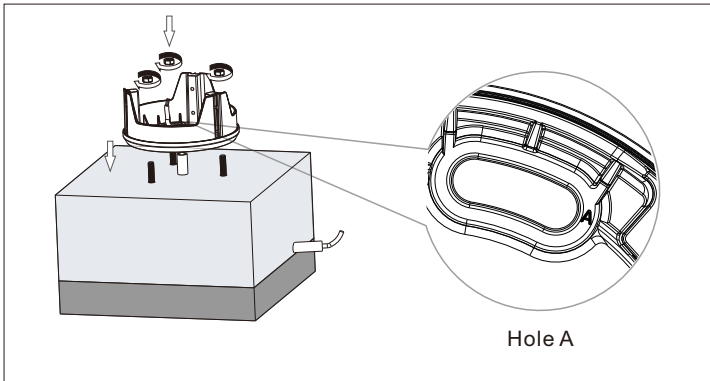
3. Fix the conduit tube, Ground drilling (three equal parts on a 125mm diameter circle, the hole diameter is 12mm), Pay attention to the radar sensing direction.
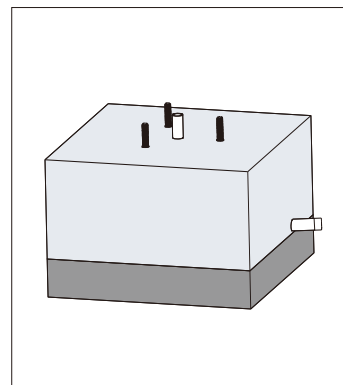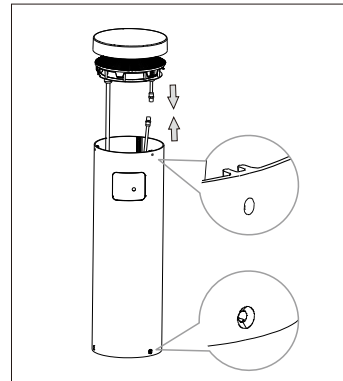

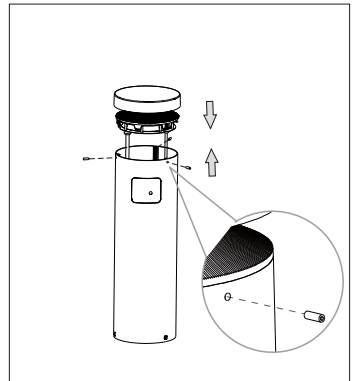
4. the expansion screw should be flat with ground
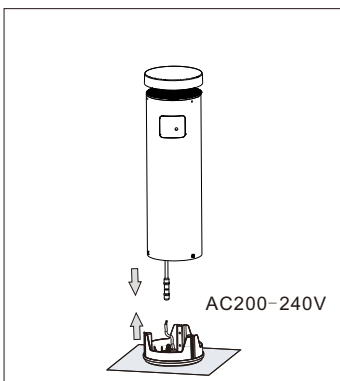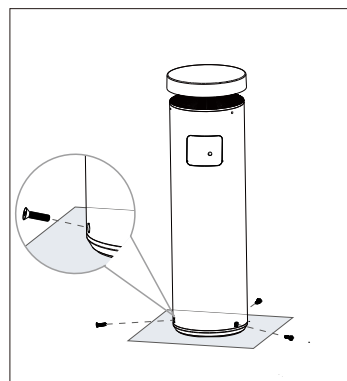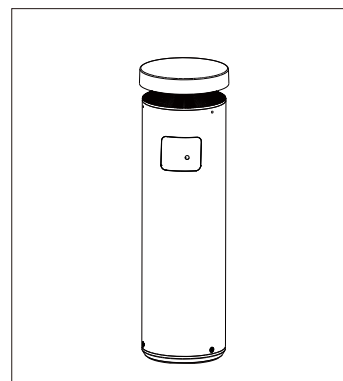
---

5. Put the wire through conduit tube

Hole A

6. Fix the mounting plate

---

7. Connect the wires

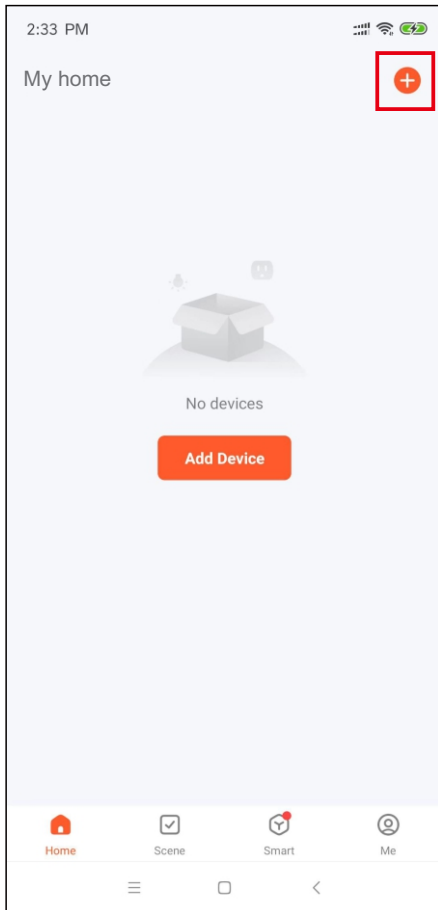8. Fix the bollard head and bollard tube

---

AC200–240V

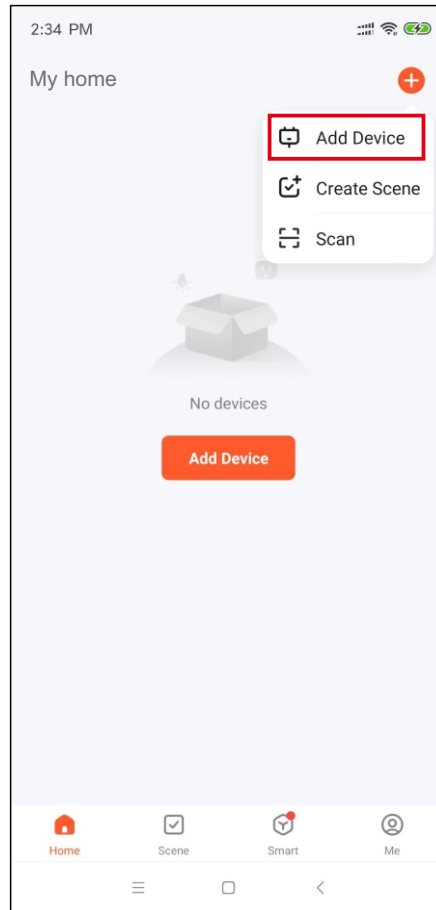9. Connect the bollard wire to the electricity cable

---

10. Fix the bollard tube onto the mounting base, Pay attention to the radar sensing direction.
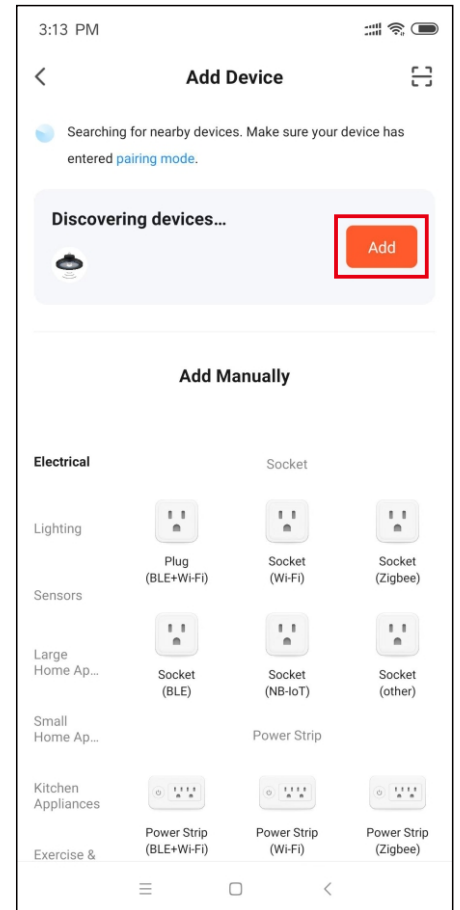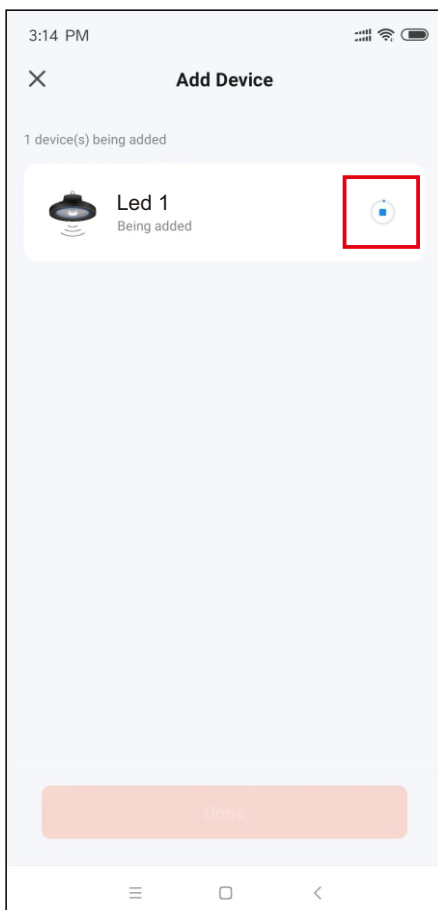
TUYA-Bluetooth instruction manual
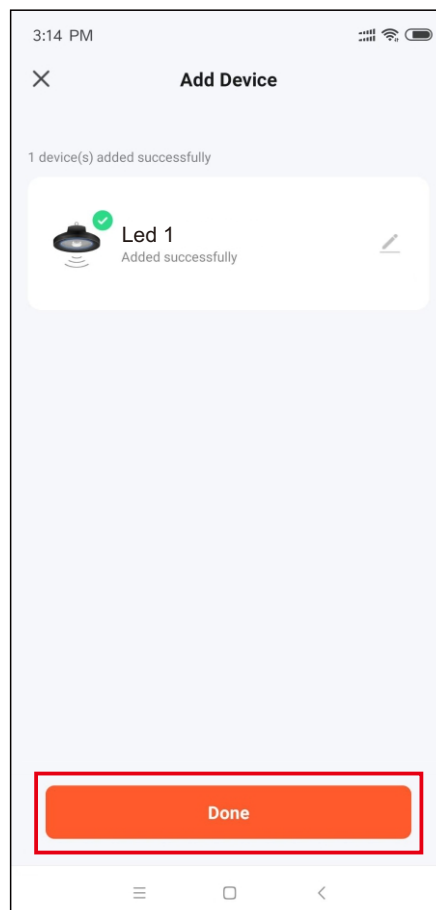

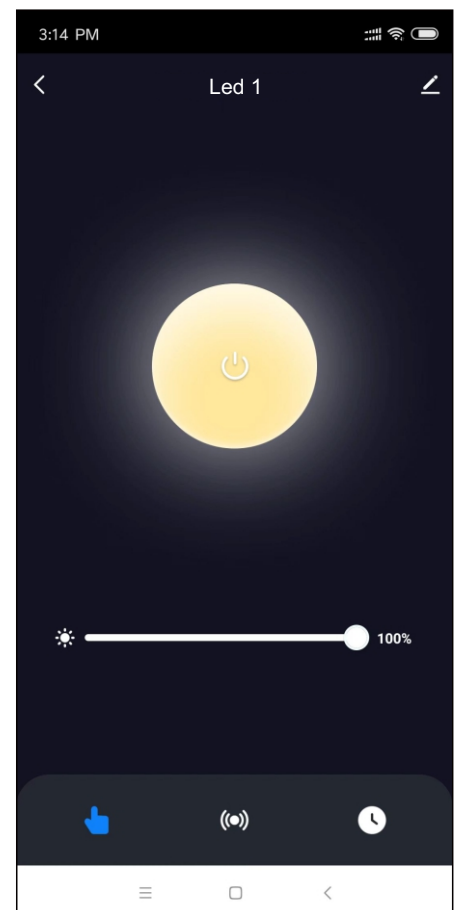1. Open TUYA app and click "+"

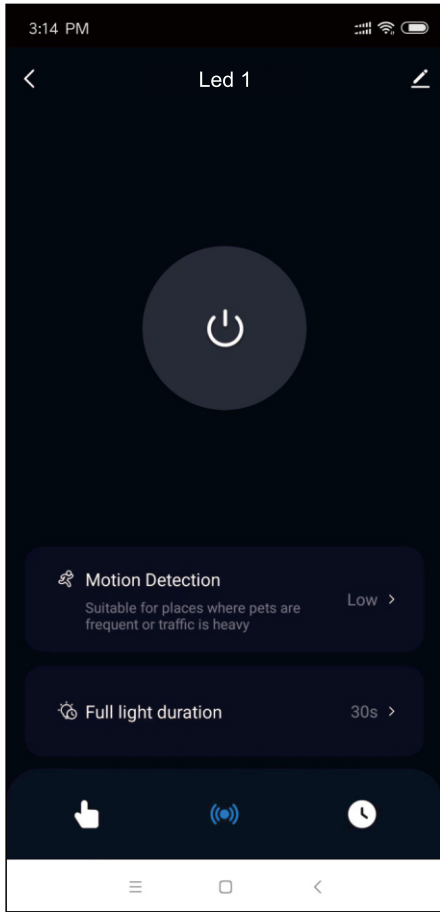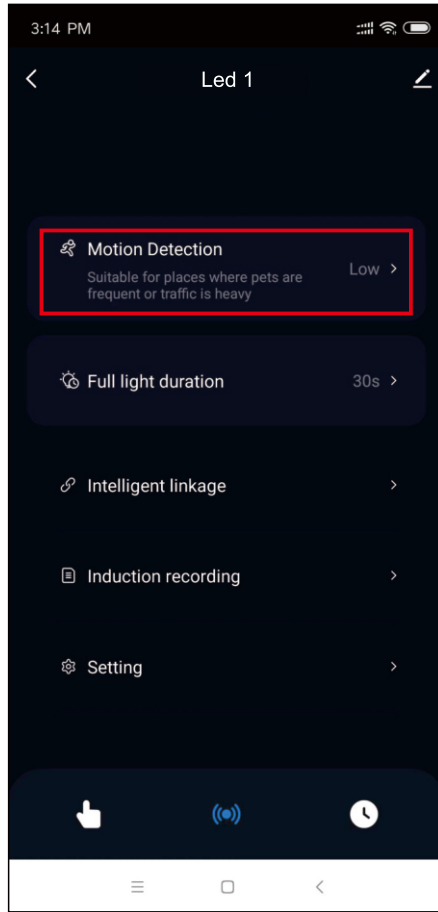2. Choose " Add Device "

3. Click " Add "
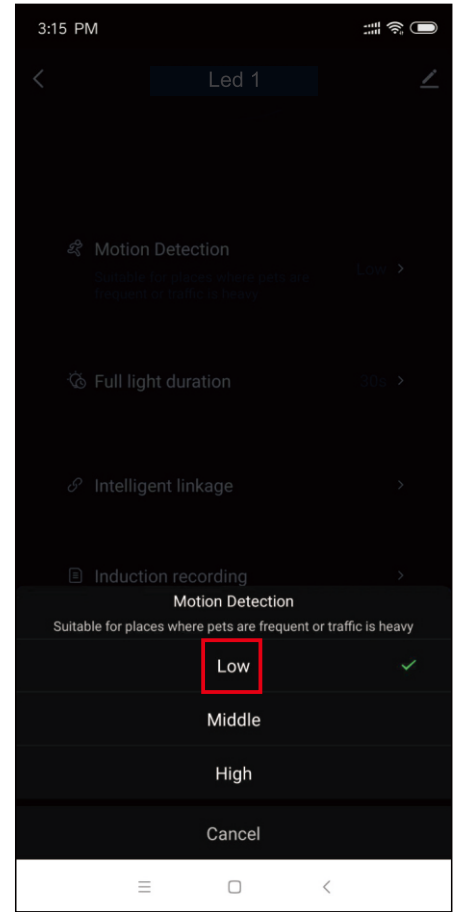
4. Add Device
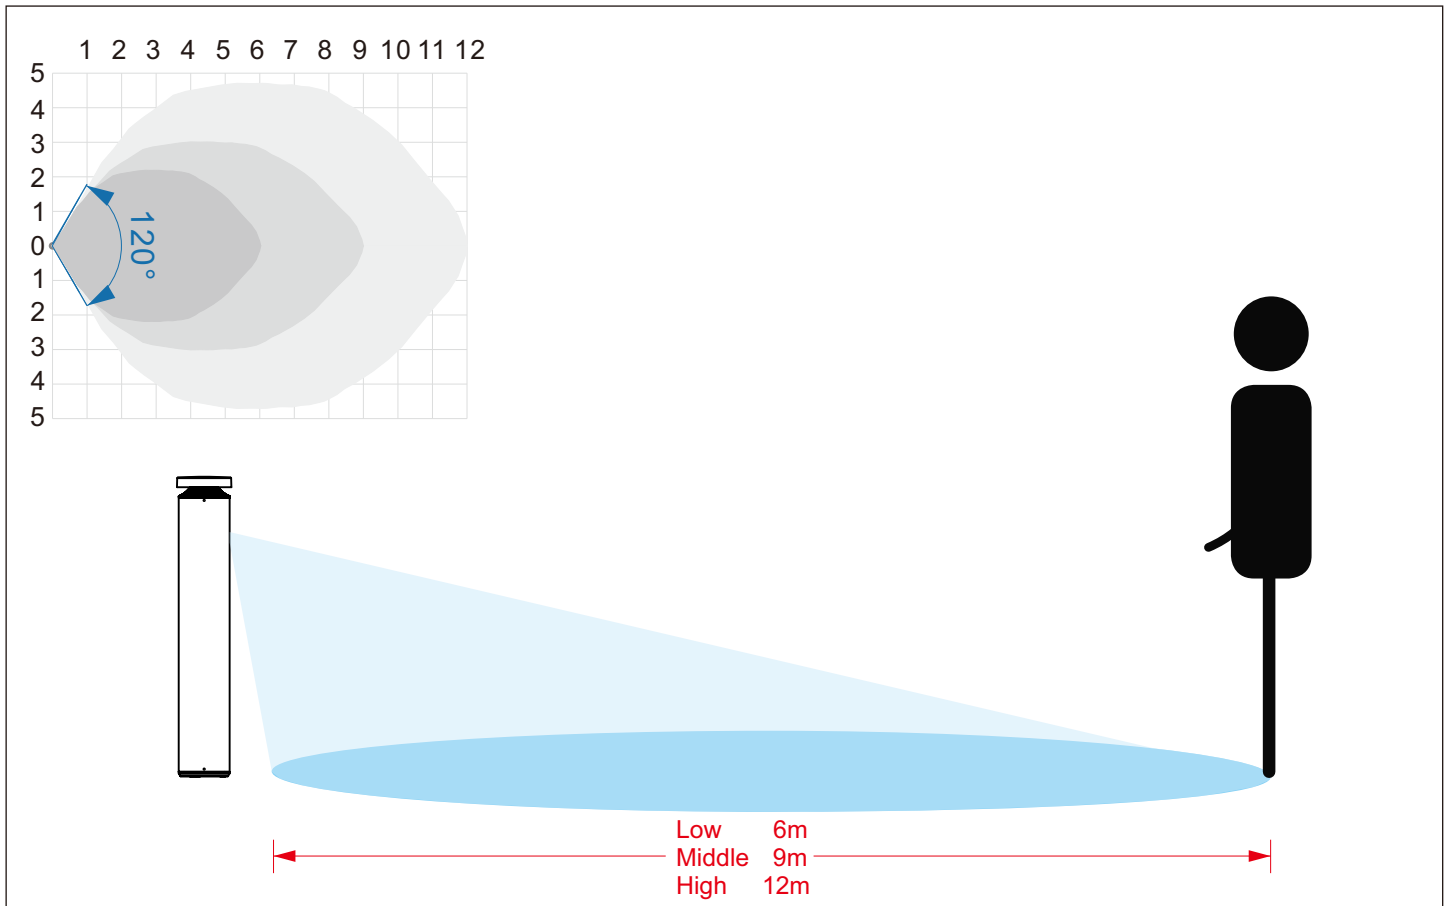
5. Add Device completed

6. On/Off and Dimming

7. Open Radar sensor

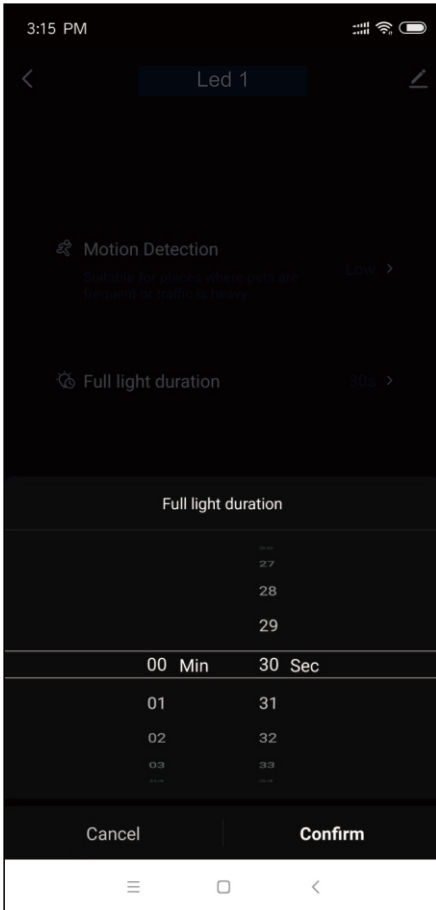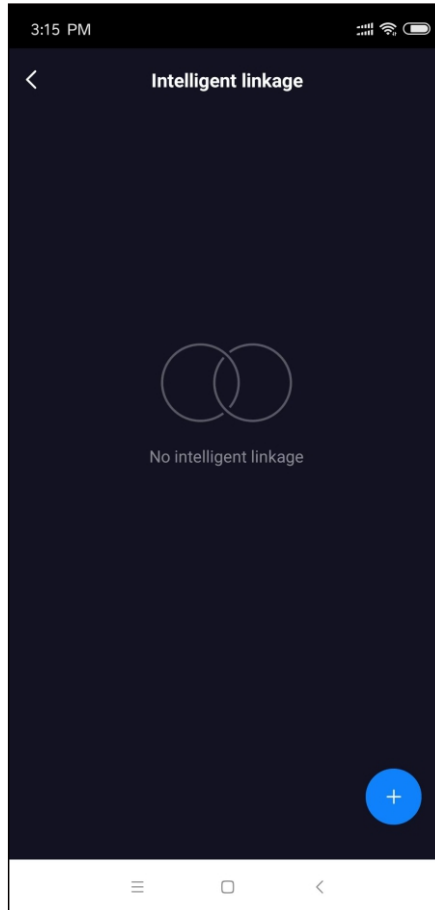8. Motion Detection

9. Click " Low "

Detectable area

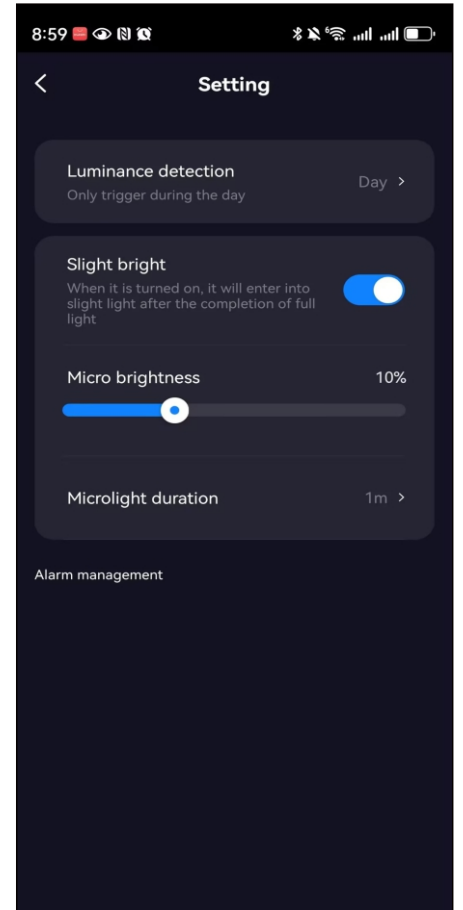1 2 3 4 5 6 7 8 9 10 11 12

120°

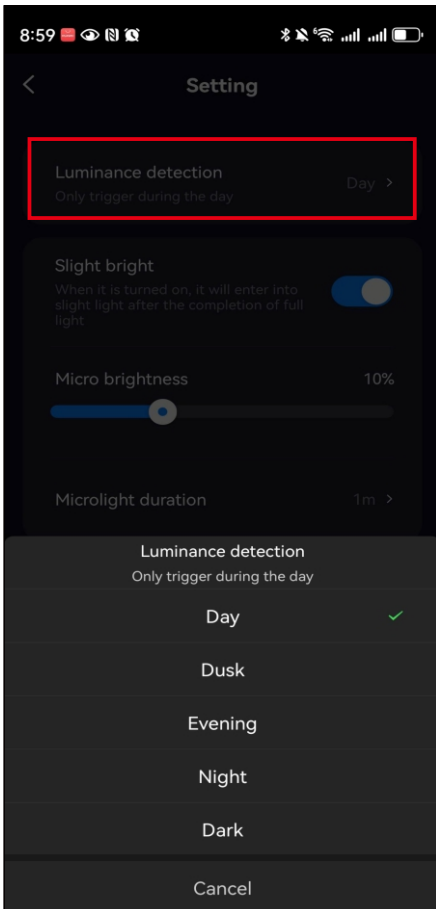Low   6m
Middle   9m
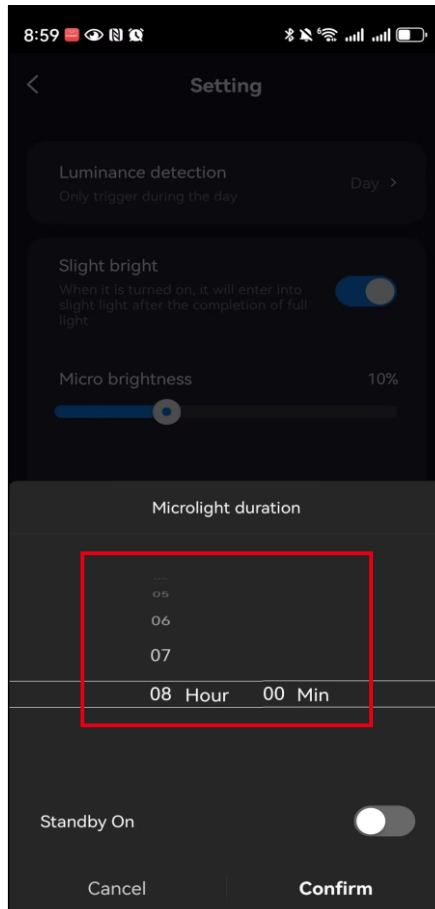High   12m

10. Full light duration
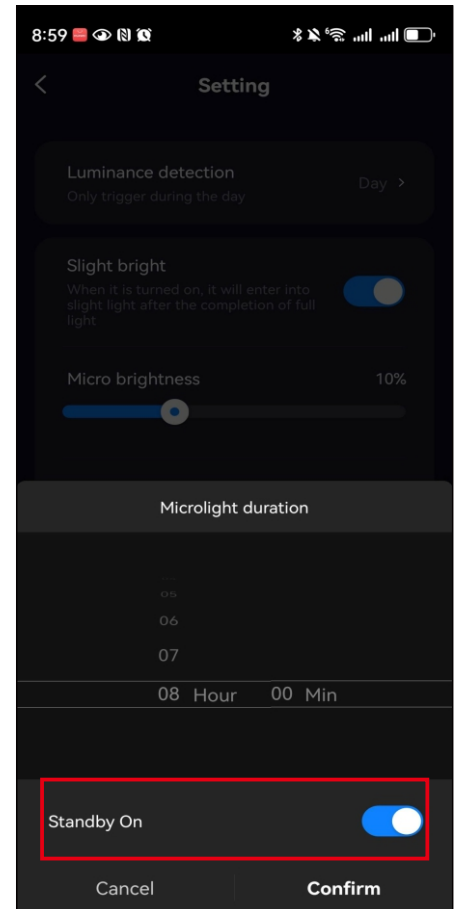

11. Intelligent linkage

12. Setting (Luminance detection, Only trigger during the day)

13. Click Luminance detection to select brightness (Day 2000Lux, Dusk 300Lux, Evening 50Lux, Night 10Lux, Dark 5Lux)

14. Set the light time after sensing someone leaving. The maximum time is 8 hours.

15. Turn on the Standby On function, and the light will stay on when it senses someone leaving.

Reset setting: Bluetooth can be reset by repeatedly turning on and off for more than 5 times